


2

1

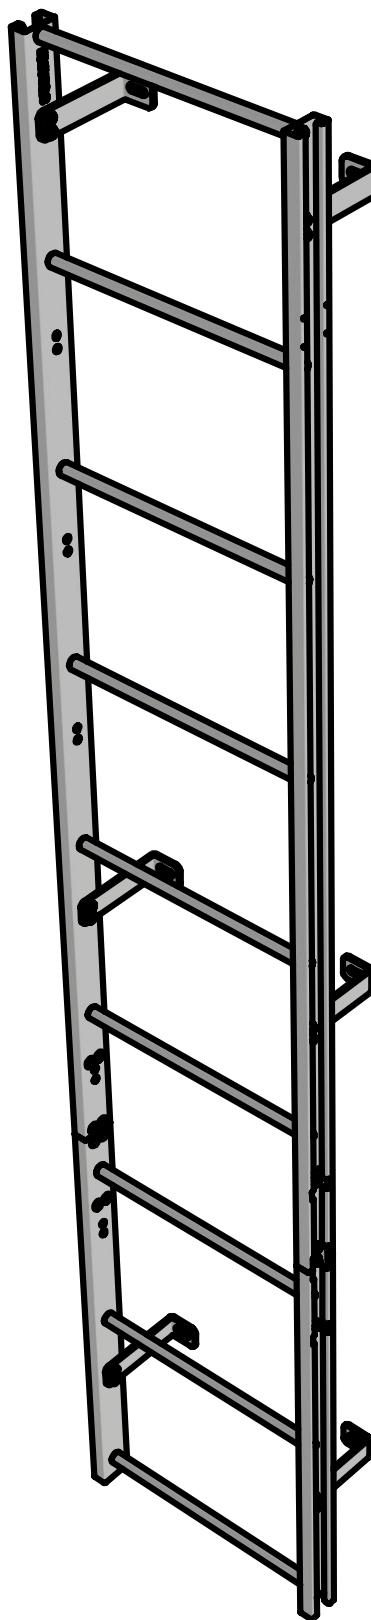

B

B

A

A

S₂ SOURCE
AND TECHNOLOGY LLC**STANDARD INSTALLATION INSTRUCTION
CLIMBER SERIES**REV
B02

SHEET 1 OF 6

2

1


2

↓

1

STEP-1:

UNPACK YOUR LADDER

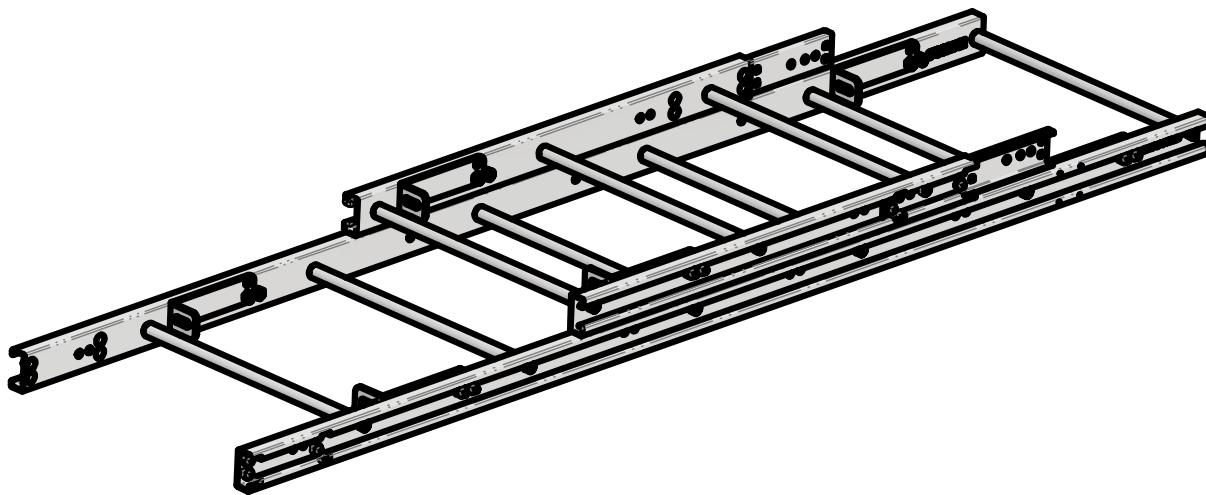

B

B

→

→

A


A

2

1

STEP-2:

SEPARATE THE TOP PIECE FROM THE BOTTOM PIECE

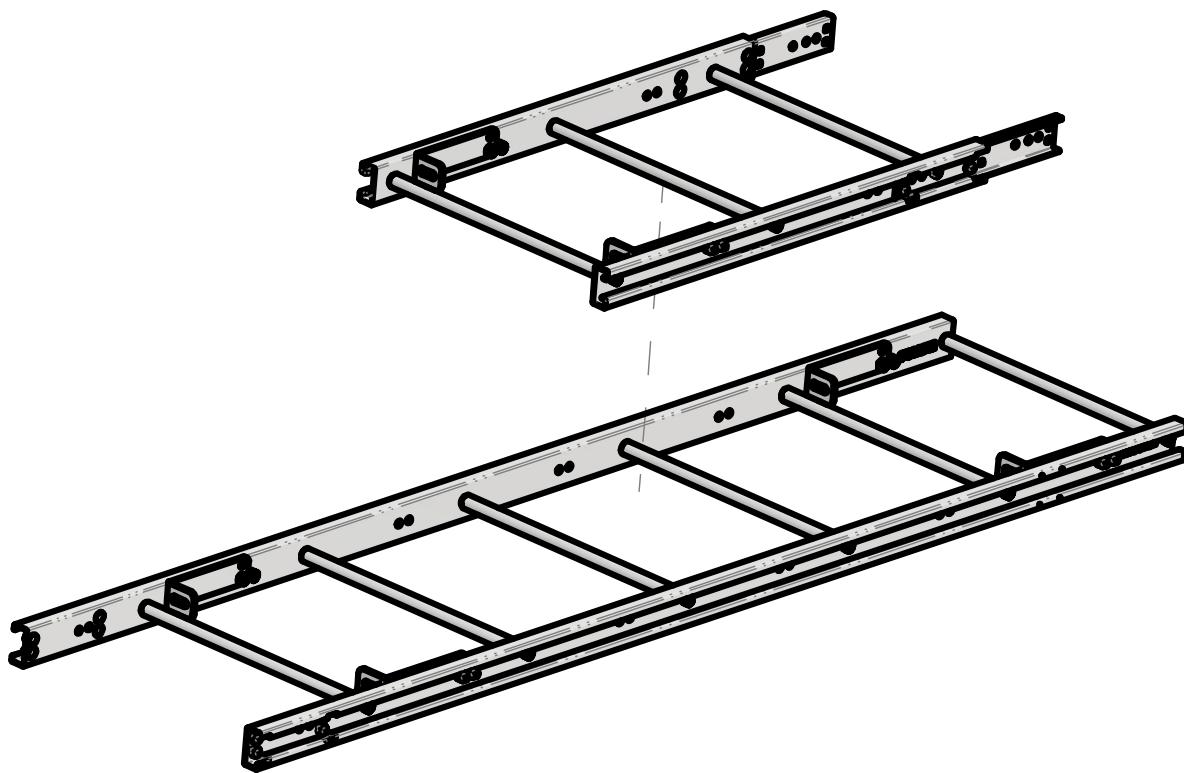

B

B

A


A

2

1


STEP-3:

ATTACH BOTTOM AND TOP PIECES

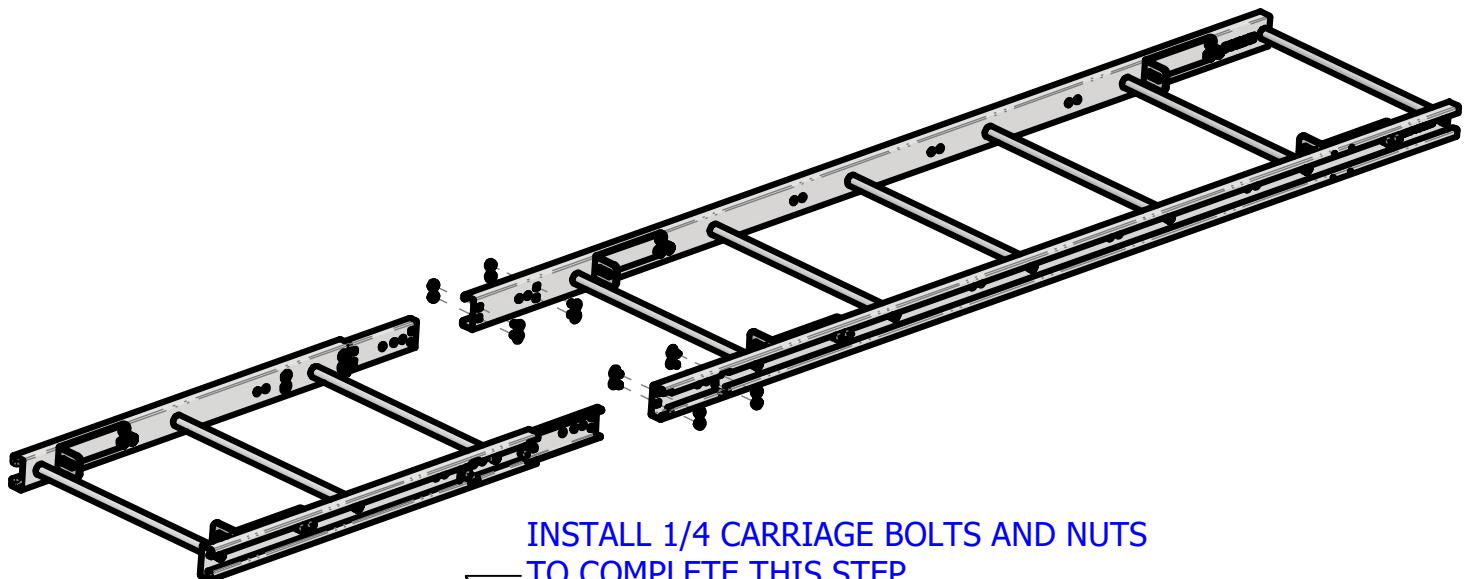

INSTALL 1/4 CARRIAGE BOLTS AND NUTS
TO COMPLETE THIS STEP
(BOLTS AND NUTS ARE PRE-POSITIONED IN THE HOLES)

CARRIAGE BOLT, 1/4-20 X 1/2 LG., STZ

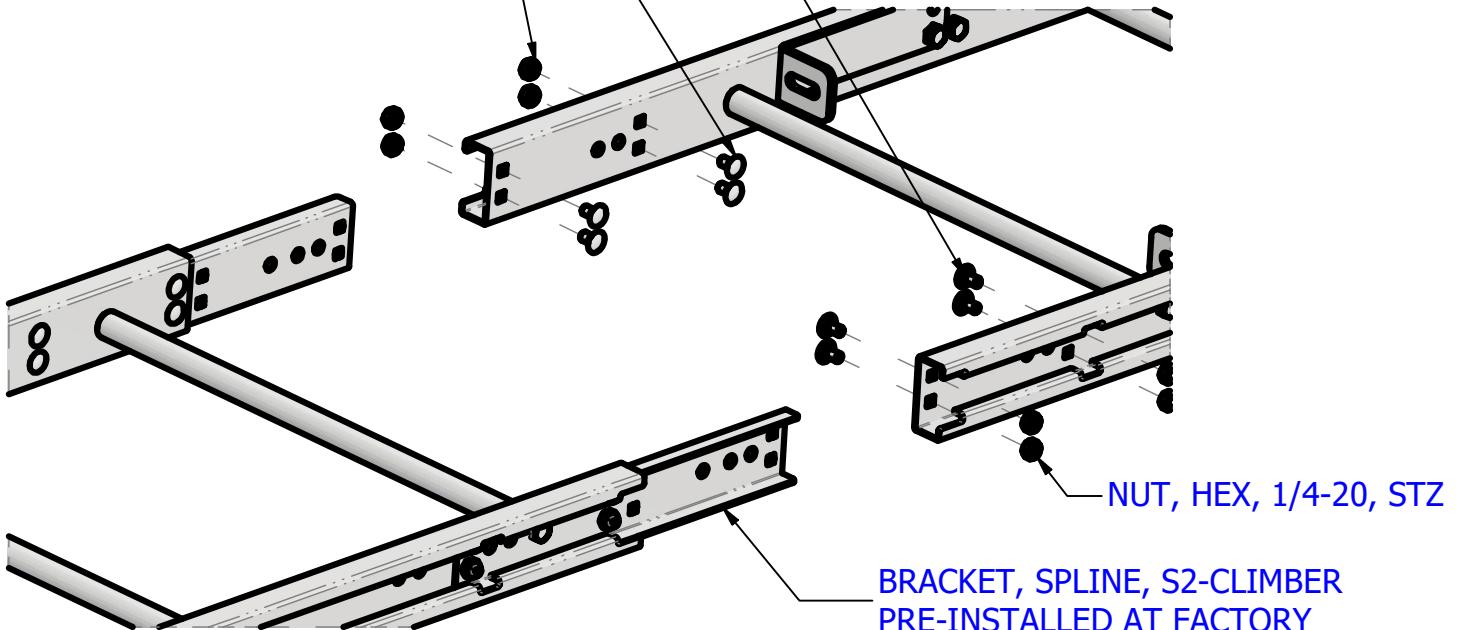

2

1


STEP-4:

SEPARATE BOTTOM AND TOP PIECES

B

B

- REMOVE 1/4-20 WALL BRACKET BOLT
- ROTATE BRACKET 90 DEGREES
- RE-SECURE USING THE SAME BOLT
- (BRACKET WAS ROTATED 90 DEGREES FOR SHIPPING)

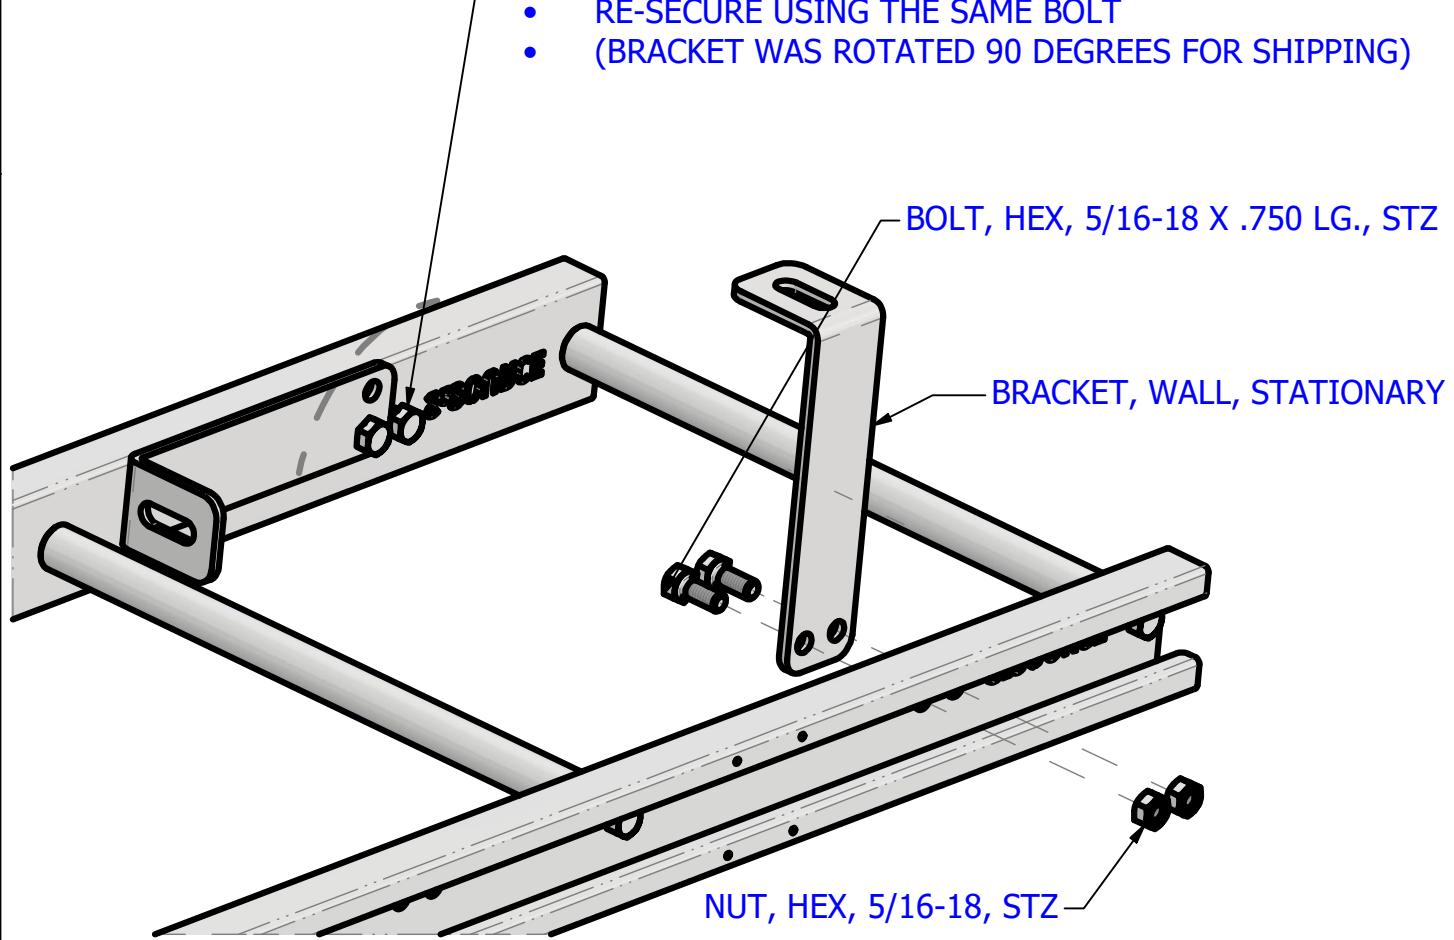

A

A

OVERALL PARTS LIST

